

These instructions are provided for your safety in order to prevent the risk of Fire, Electric shock or Injury. Please retain for future reference. When fitting is in operation, some parts will become hot; take care when using/handling.

 
- Ensure the lamp type and max wattage is followed- do not exceed. Take care not to overtighten lamp.
- Do not touch the lamp (bulb) or lamp holder while in operation, as both become very hot.
- Turn off and unplug fitting, leaving lamp to cool before changing lamp. Dispose of old lamps carefully.
- Adjust light fitting only when power to the fitting is off and has been left to cool.
- Never leave a fitting without a lamp in position.
- Keep light fitting away from combustible materials such as soft furnishings.
- Ensure children do not play with the light fitting.
- Ensure the light is positioned on a solid, level and non-slip surface and make sure the position of the cable does not pose a trip hazard.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- For use in a dry, indoor environment only. Ensure the fitting does not come into contact with any liquids.

### Cleaning and Maintenance

Metal finishes should only be cleaned with a soft, dry cloth. Do not use polishes or abrasives. Bone china can be cleaned using a soft damp cloth with a mild detergent if necessary. Switch off power to the fitting before cleaning. Spare parts are available for this product, please see contact details on the reverse.

# Hector Table & Floor Light

## Instruction Manual

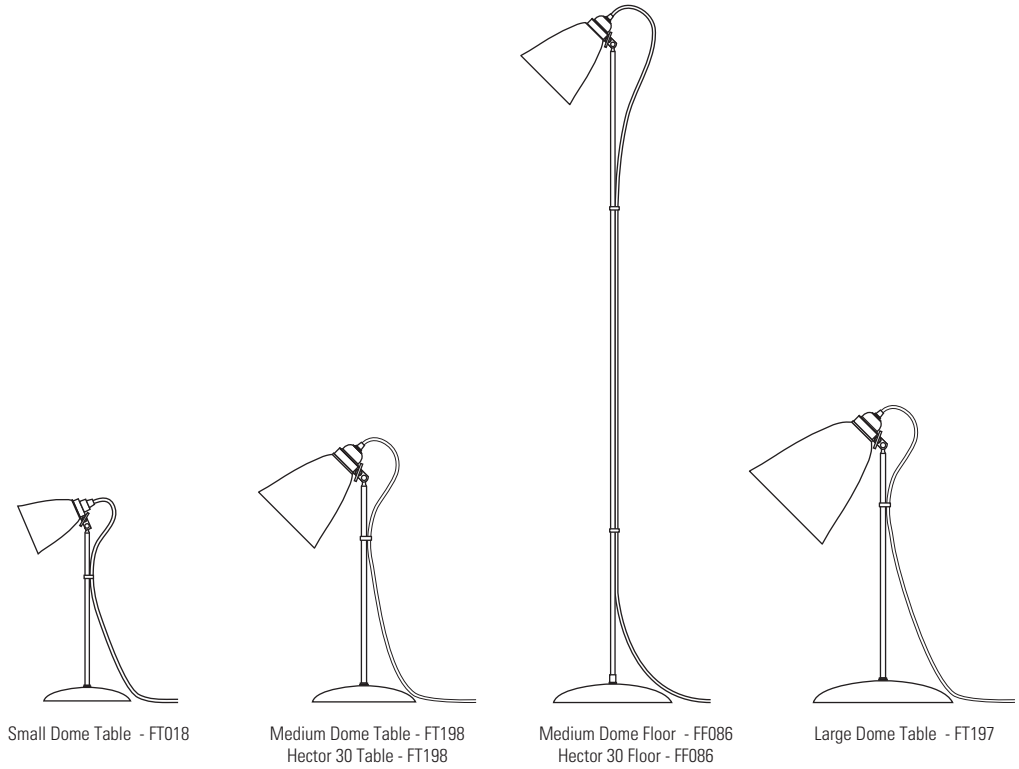

Small Dome Table - FT018      Medium Dome Table - FT198  
Hector 30 Table - FT198      Medium Dome Floor - FF086  
Hector 30 Floor - FF086      Large Dome Table - FT197

Small Dome Table - FT018  
Medium Dome Table - FT198  
Medium Dome Floor - FF086  
Hector 30 Table - FT198      Small Pleat Table - FT021  
Medium Pleat Table - FT380  
Medium Pleat Floor - FF388      Small Flowerpot Table - FT155  
Medium Flowerpot Table - FT429  
Medium Flowerpot Floor - FF430      Small Circle Line Table - FT018CL  
Medium Circle Line Table - FT198CL  
Circle Line Floor - FF086CL



Linear Table - FT492LW  
Linear Floor - FF495      21 Table - FT487      Metal Table - FT315LP  
Metal Floor - FF426LP      Bibendum Table - FT491BW  
Bibendum Floor - FF497WR










Established in 1990, Original BTC manufactures relaxed, familiar lighting for traditional and contemporary homes. All products are hand-assembled in Oxford from high quality components, produced in the UK.



# Hector Table & Floor Light

| 230V ac 50Hz | IP20 |

 
FT018	Small Dome Table	FT197	Large Dome Table
FT021	Small Pleat Table		
FT155	Small Flowerpot Table	FF086	Medium Dome Floor
ST018CL	Small Circle Line Table	FF086	Hector 30
		FF388	Medium Pleat Floor
FT198	Medium Dome Table	FF430	Medium Flowerpot Floor
FT198	Hector 30	FF086CL	Circle Line Floor
FT380	Medium Pleat Table	FF495	Linear Floor
FT429	Medium Flowerpot Table	FF426LP	Metal Floor
FT198CL	Medium Circle Line Table	FF497WR	Bibendum Floor
LFT492	Linear Table		
FT487W	21 Table		
FT315LP	Metal Table		
FT491BW	Bibendum Table		

LAMP GUIDANCE			
BASE	SHAPE	TYPE**	WATTAGE***
 E27	  GLS BALL	INCANDESCENT ✓ CFL ✓ ECO-HALOGEN ✗ LED ✓	40W MAX 11W n/a 7W
LAMP GUIDANCE (Hector Small ONLY)			
BASE	SHAPE*	TYPE**	WATTAGE***
 E14	   CANDLE BALL R50	INCANDESCENT (R50 only) ✓ CFL ✓ ECO-HALOGEN ✗ LED ✓	40W 9W n/a 7W
* Use low energy CFL or LED candle/ball lamp for a combination of ambient and low level task lighting or R50 lamp if high level task illumination required.			
** Warm white (2700k) low energy lamps recommended.			
*** Wattage value provided as a guide to suitable lamps. Lower wattage than stated may be used.			

## Contents

- A Shade/Stem/Cable Assembly
- B Base\*

\*This will be detached from stem in floor version

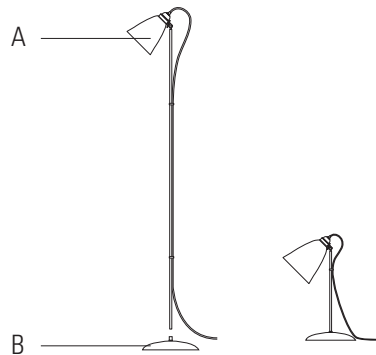

## Assembling Base

 
- A Stem
- B Thread
- C Coupler
- D Base

### STEP 1

Place base on a level floor (non-slip surfaces work best during assembly).


### STEP 2

Support the stem and shade with both hands, then insert the thread into the coupler on the base. Screw the stem into the coupler until a tight, firm fit is achieved (the thread should no longer be visible).

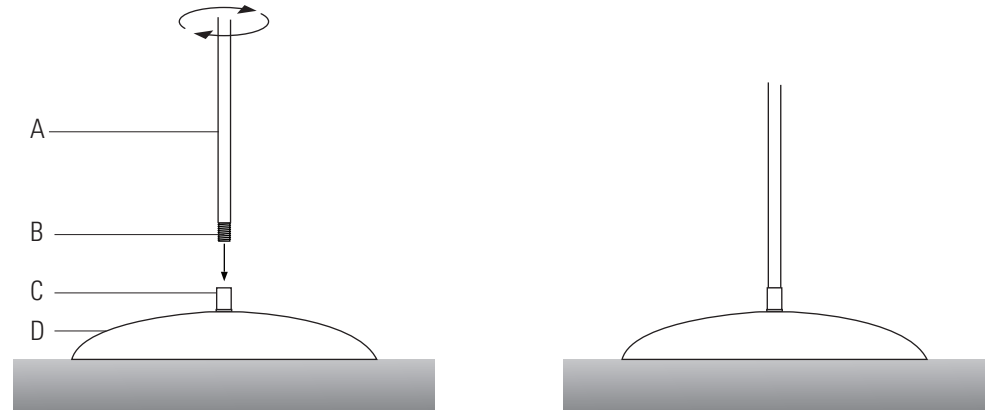

## Adjusting Shade

 - With one hand supporting the shade, gently loosen the clamp handle (2). One quarter-turn, in an anti-clockwise direction should be sufficient.
- The shade can then be moved into desired position, ensuring the clamp remains attached to the stem, but without applying excessive force to the washers on the inside of the clamp. Ensure the shade is still supported whilst adjusting position.
- Secure in place by gently tightening clamp handle, **taking care NOT to overtighten**, as this can damage the clamp.
- Do not adjust the position of the shade without loosening the clamp first, as this will damage the washers.

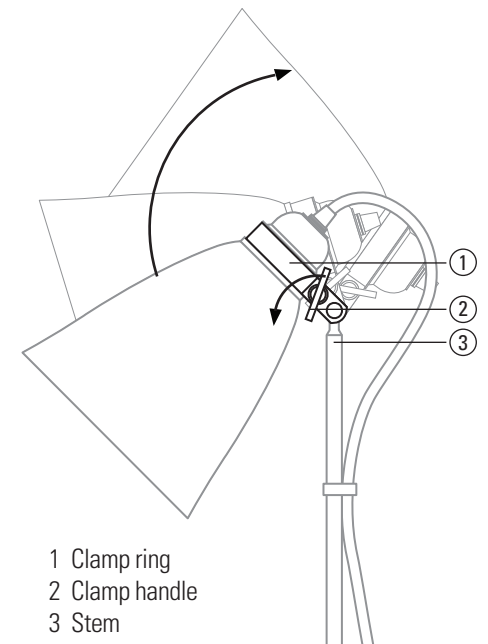

- 1 Clamp ring
- 2 Clamp handle
- 3 Stem